





DuraVision™ Convex Mirror Installation Guide:

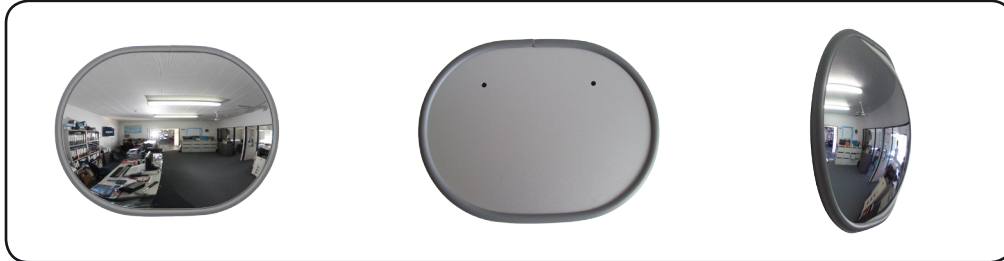

DeLuxe Flush Fit

1. Measure the distance between the two hole slots on the wall (170mm)
2. Screw suitable wall screws into the wall making sure they are level and protruding out from the wall approx 13mm. The screw head must be no bigger than 6mm in diameter to fit through the hole.
3. Slot the mirror onto the screws to hang.

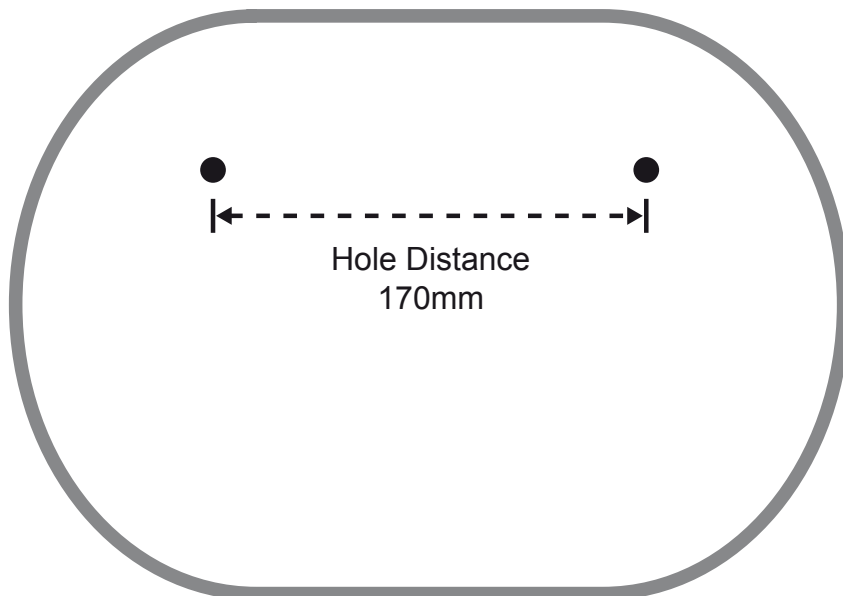

Installation Guides:

- ▶ Indoor Standard Convex Mirror
- ▶ Indoor Space Saver Convex Mirror
- ▶ Indoor Economy Flush Fit Mirror
- ▶ [Indoor DeLuxe Flush Fit Mirror](#)
- ▶ Indoor Ceiling Dome Convex Mirror
- ▶ Indoor Half Dome Convex Mirror
- ▶ Indoor Quarter Dome Convex Mirror
- ▶ Outdoor Heavy Duty Convex Mirror
- ▶ Outdoor De Luxe Convex Mirror
- ▶ Outdoor Pro Series Convex Mirror
- ▶ Inspection Convex Mirrors
- ▶ Food Processing Convex Mirrors
- ▶ School Mirror Set
- ▶ Corrections Dome With Frame
- ▶ Corrections Half Dome With Frame
- ▶ Corrections Quarter Dome With Frame

Cleaning Guides:

- ▶ Acrylic Mirror
- ▶ Stainless Steel Mirror
- ▶ Polycarbonate Mirror

DuraVision™ Mirror Systems

Find our more about the great range of DuraVision Mirror Systems at our website...



www.duravision.net