


DuraVision™ Convex Mirror Installation Guide:

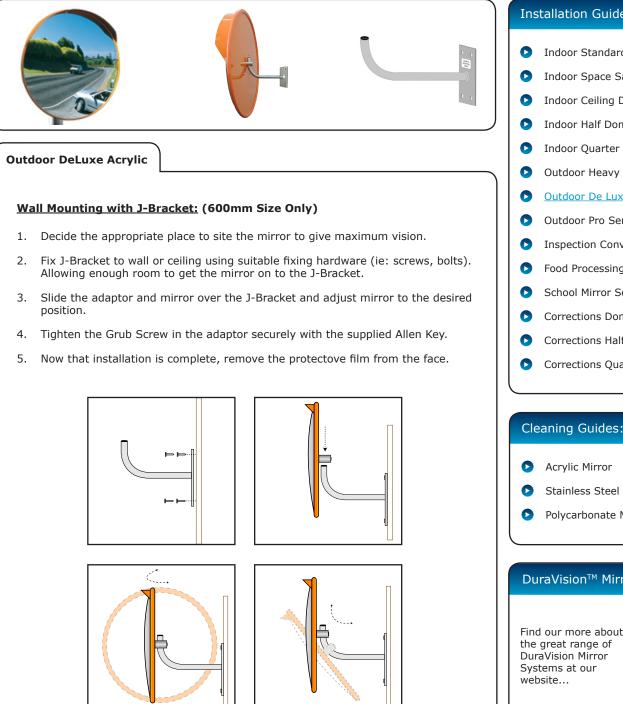

Installation Guides:

- Indoor Standard Convex Mirror
- Indoor Space Saver Convex Mirror
- Indoor Ceiling Dome Convex Mirror
- Indoor Half Dome Convex Mirror
- Indoor Quarter Dome Convex Mirror
- Outdoor Heavy Duty Convex Mirror
- Outdoor De Luxe Convex Mirror
- Outdoor Pro Series Convex Mirror
- Inspection Convex Mirrors
- Food Processing Convex Mirrors
- School Mirror Set
- Corrections Dome With Frame
- Corrections Half Dome With Frame
- Corrections Quarter Dome With Frame

Acrudic Mirror
Acrylic Mirror
Stainless Steel Mirror
Polycarbonate Mirror

DuraVision[™] Mirror Systems

Find our more about the great range of DuraVision Mirror Systems at our




www.duravision.net

Manufacturered By Bennett Mirror Technologies Ltd - 16 Maleme St - Tauranga - New Zealand - Tel: +64 7 5412068 - E: mirrors@bennettmirror.com



DuraVision[™] Convex Mirror Installation Guide:

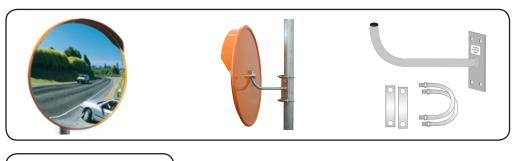


Outdoor DeLuxe Acrylic


Pole Mounting with U-Bolts: (600mm Size Only)


- 1. Choose a 75mm Round pole to attach the U-Bolts to.
- 2. Thread the U-Bolts through one side of the J-Bracket and then through both sides of the U-Bolt Flat Plate.
- 3. Thread the Washer and Nut onto the U-Bolts and tighten.
- 4. Slide the adaptor and mirror over the J-Bracket and adjust mirror to the desired position.
- 5. Tighten the Grub Screw in the adaptor securely with the supplied Allen Key.
- 6. Now that installation is complete, remove the protectove film from the face.



U-Bolt threads through ONE SIDE of the J-Backet

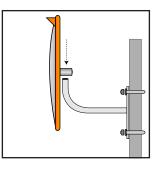

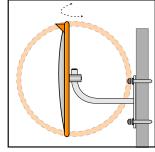


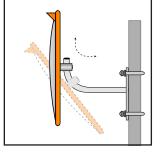

Installation Guides:

- Indoor Standard Convex Mirror
- Indoor Space Saver Convex Mirror
- Indoor Ceiling Dome Convex Mirror
- Indoor Half Dome Convex Mirror
- Indoor Quarter Dome Convex Mirror
- Outdoor Heavy Duty Convex Mirror
- Outdoor De Luxe Convex Mirror
- Outdoor Pro Series Convex Mirror
- Inspection Convex Mirrors
- Food Processing Convex Mirrors
- School Mirror Set
- Corrections Dome With Frame
- Corrections Half Dome With Frame
- Corrections Quarter Dome With Frame

Cleaning Guides:



- Stainless Steel Mirror
- Polycarbonate Mirror

DuraVision[™] Mirror Systems


Find our more about the great range of DuraVision Mirror Systems at our website...



www.duravision.net





DuraVision™ Convex Mirror Installation Guide:

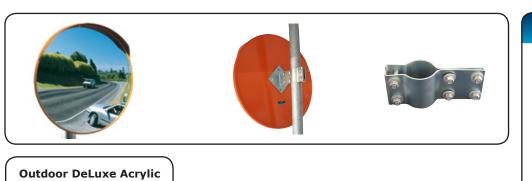


Pole Mounting with Clamp Bracket: (800mm - 1000mm Sizes Only)

- 1. Decide the appropriate place to site the mirror on 75mm pole.
- 2. Fix clamp and mirror mount assembly to the pole.
- 3. Make sure adjustment slot is to the bottom
- 4. Fix the mirror to the clamp bracket.
- 5. Once the desired position has been found, tighten the bolts and nuts.
- 6. Now installation is complete, remove the protective film from the face.

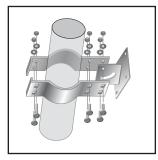

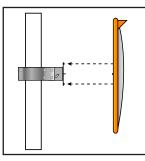

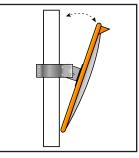

Installation Guides:

- Indoor Standard Convex Mirror
- Indoor Space Saver Convex Mirror
- Indoor Ceiling Dome Convex Mirror
- Indoor Half Dome Convex Mirror
- Indoor Quarter Dome Convex Mirror
- Outdoor Heavy Duty Convex Mirror
- Outdoor De Luxe Convex Mirror
- Outdoor Pro Series Convex Mirror
- Inspection Convex Mirrors
- Food Processing Convex Mirrors
- School Mirror Set
- Corrections Dome With Frame
- Corrections Half Dome With Frame
- Corrections Quarter Dome With Frame

Cleaning Guides:

- Acrylic Mirror
- Stainless Steel Mirror
- Polycarbonate Mirror

DuraVision[™] Mirror Systems

Find our more about the great range of DuraVision Mirror Systems at our website...



www.duravision.net

Manufacturered By Bennett Mirror Technologies Ltd - 16 Maleme St - Tauranga - New Zealand - Tel: +64 7 5412068 - E: mirrors@bennettmirror.com




DuraVision™ Convex Mirror Installation Guide:





Wall Adaptors are not included with the DeLuxe Acrylic Mirror Range but are available to be purchased separately.


Wall Mounting with Optional Wall Adaptor: (800mm - 1000mm Sizes Only)

- 1. Decide the appropriate place to site the mirror (on a flat surface) and fix the Wall Adaptor using suitable hardware.
- 2. Fix the clamp and mirror mount assembly to the Wall Adaptor making sure the slot is to the bottom.
- 3. Fix the mirror face to the clamp bracket.
- 4. Once the desired position has been found, tighten the bolts and nuts.
- 5. Now that installation is complete, remove the protective film from the face.

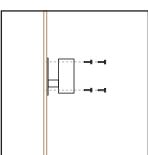

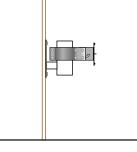

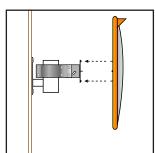

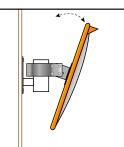

Installation Guides:

- Indoor Standard Convex Mirror
- Indoor Space Saver Convex Mirror
- Indoor Ceiling Dome Convex Mirror
- Indoor Half Dome Convex Mirror
- Indoor Quarter Dome Convex Mirror
- Outdoor Heavy Duty Convex Mirror
- Outdoor De Luxe Convex Mirror
- Outdoor Pro Series Convex Mirror
- Inspection Convex Mirrors
- Food Processing Convex Mirrors
- School Mirror Set
- Corrections Dome With Frame
- Corrections Half Dome With Frame
- Corrections Quarter Dome With Frame

Cleaning Guides:



- Stainless Steel Mirror
- Polycarbonate Mirror

DuraVision[™] Mirror Systems

Find our more about the great range of DuraVision Mirror Systems at our website...



www.duravision.net